



## DoggySwim S490 Pool Installation Instructions

Thank you very much for your purchase of a DoggySwim exercise pool. In order to enable us to complete your delivery as smoothly as possible please make the following arrangements.

### Electrical Supply

You will need to provide a 27 amp dedicated supply. The correctly rated dedicated power supply should be provided by the way of a waterproof commando socket near the pool and a Type C breaker fitted into the consumer unit. Alternatively you could fit a rotary isolator and have your own electrician hard wire directly into the pool control box.

To comply with BS7671 legislation as of the 1<sup>st</sup> January 2005 a competent electrician registered with one of the following must carry out all electrical work: BRE Certification Ltd (ECA & IEE); British Standards Institution; ELECSA Ltd; NICEIC Certification Services Ltd or Zurich Certification Limited. Your electrician should give you a certificate once the work has been completed and this should be available for our technicians to see.

### Base:

The exercise pool must be sited on a base of concrete or any sturdy patio / deck. The base should be a minimum of 5650 x 2500mm if you are sinking your pool (please refer to the separate Sinking Instructions if you are intending to sink your pool) or 4900mm x 2200mm (with access to the components) if above ground, and to accommodate the ramp alongside the pool, the base should be a minimum of 4900mm x 2911mm. The control panel is on the short side at the same end as the steps, as are the electrical components and drain down point. Please ensure the female commando socket is located at the control panel end so that our technician can connect to the control box of the exercise pool.

If you want to site the exercise pool on an existing patio or concrete base please ensure it is completely flat and that it will happily hold the weight of the exercise pool once filled with water. If there is a drop of 15mm or more across the area it is advisable to have a concrete skim laid to ensure the base is level. We are unable to jack the exercise pool to make it flat as this would weaken the under-structure and would invalidate your guarantee.

### Draining your Pool (above ground)

Each pool has a drainage outlet with a tap situated on the outside or via a small door. To drain your pool attach a hose with the correct fitting and turn the tap to open. Once the majority of the water has been drained, turn off the tap, remove the hose and fitting and refill.

### Electrical Compartment

In the event that a technician needs to work on your pool or for you to be able to drain it there must be a clear working space all round the exercise pool, this should be at least 600mm at the component compartment end and 600mm at the end opposite to the component compartment.

### Access/Delivery:

Please call 01245 207345 to arrange a site visit, if necessary, and organise your delivery to run as smoothly as possible and cover all aspects of the installation of your pool. Please note if craneage is required this will be at your cost, we are able to put you in contact with a suitable crane company in most cases.

We regret we are unable to accept responsibility for any damage caused to underground services during installation by hiab or crane.

### To Arrange Delivery:

If you have not already arranged a delivery date please call our Installation Department on 01245 207345. Please note that during peak times all installation slots may be fully booked for up to 3 weeks. If you have arranged a delivery we will send you confirmation of this by post.

If you have any queries or require further information regarding the delivery of your pool please contact your Sales Agent or the Installation Department on 01245 207345.

We hope to have you and your dog in "Hot Water" very soon.




## Instructions and Advice for Sinking

### DoggySwim S490 Exercise Pool

#### Into Gardens and Decks

If you intend to sink or semi sink your exercise pool please read the following carefully.

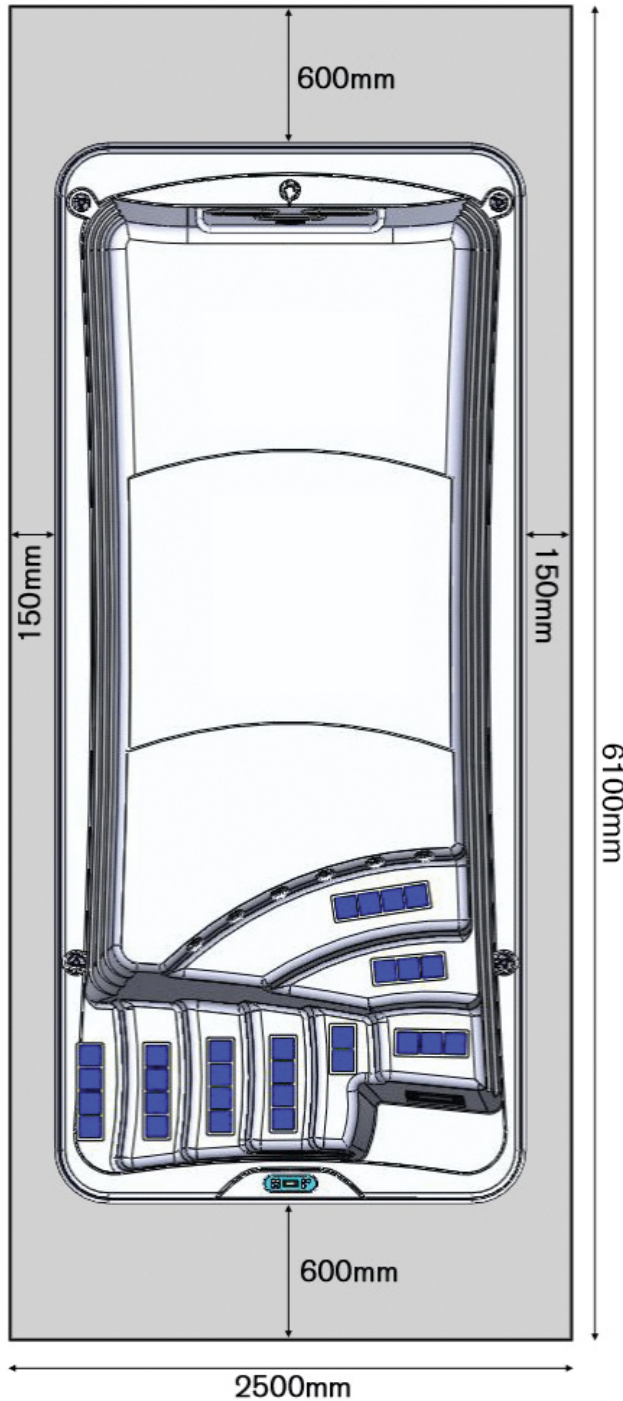

When digging your hole please allow 600mm gap at the control panel end and the opposite end and 150mm gap along the other long sides of the pool. This gap will also allow for airflow and tolerance of natural movement from water volume when filled. Dig the hole and lay a 6" (16cm) reinforced concrete base with a soak away underneath and ensure the pit has retaining walls of sufficient structural strength (back filling is not recommended).

Please make sure the soak away is sufficient to ensure your hole cannot become full of water because your warranty will not cover flooded electrical components. Also please ensure leaves and other objects can be removed easily to ensure your soak away cannot become blocked. It may be advisable to install a submersible pump with a float switch as a secondary defence against your pit flooding on a separate power supply to pool.

The electrics are not designed to get wet, we recommend you seek qualified help in designing and building your pit to ensure it cannot flood with water and is structurally sound.

In Decking: If you are sinking your pool and decking around it please remember to build the decking to allow access to the electrical compartment and all components. Please ensure the electrical compartment has some ventilation for correct functioning. If decking up to/around pool, we would recommend decking after installation.

With Cover Lifting Device: If you are going to sink your pool and would like to use a cover lifting device, with a Cover Valet you can fully sink your pool as the lifting arms can be attached to the decking.

Please refer to the Electrical Supply and Base Instructions on page 1 with regards to necessary location of electrical sockets.

If you have any questions or queries regarding sinking your exercise pool please contact your sales person or the service department on 01245 207345.